

TECH TIP

PhotoGrav Updated Material Parameters Version 3.0

Material Parameters available for Download:

Granite

Step 1:


Create a PhotoGrav Parameters folder on your desktop.

Step 2:

From the box above, select a material to download its parameters.

Step 3:

Once you have selected the material to download a window like this will appear. Click on the “Save” button and save the file to the Parameters folder you just created.

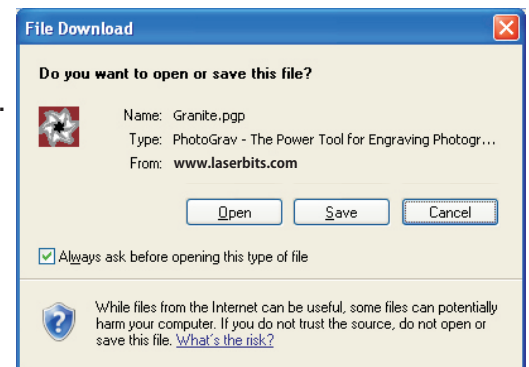


Step 3 Example

Step 4:

Once your parameters have downloaded, the next step is to import them into PhotoGrav so you can start using them.


- Open PhotoGrav
- Select your image
- On the toolbar at the top, select “Session”
- Scroll down to “Import Parameters”
- Locate the new parameters folder you just created and select the file corresponding to the material you are using.

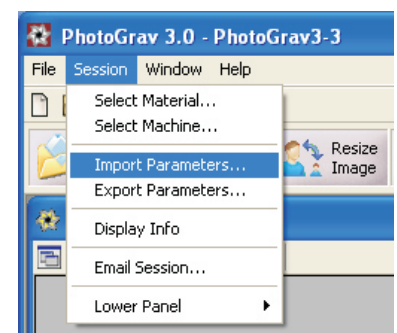

Step 4 Example

Step 5:

After your parameters have downloaded, you will see this window, indicating your parameters have downloaded successfully. These parameters will automatically be inserted into your setting and is automatically ready to be used.

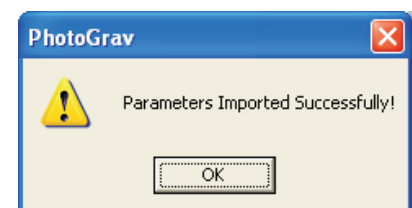

Step 5 Example

